

ASSEMBLY INSTRUCTIONS



Congratulations on your purchase of the PROTOform CORVETTETM body for your ARRMA® Felony™/Infraction™! Please take a moment to review these instructions. Follow the painting & trimming tips below before making the necessary adjustments to your chassis for a perfect fit.

PAINTING & TRIMMING TIPS


Scan this QR Code for painting tips!




- Wash the inside of your body with dish soap
 - and place window masks inside
- Paint your custom livery using polycarbonate-safe paint
- Peel off the protective overspray film on the outside of your body & remove window masks
- Detail your body using the included decal sheet
- Trim your body & wing on marked lines using body scissors and/or hobby knife
- 6 Drill/ream 8.5mm diameter body post holes on the four marked locations
 - (hood and rear deck)
- Install Rear Wing using the included hardware, drilling/reaming holes on the marked locations on wing and wing posts
- Secure body using body clips

PREPARE YOUR CHASSIS


1 Remove all stock body panels & rear exhaust pipe from chassis (if applicable)

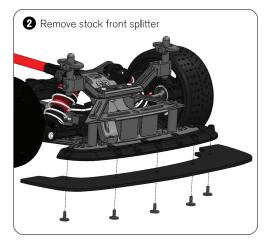




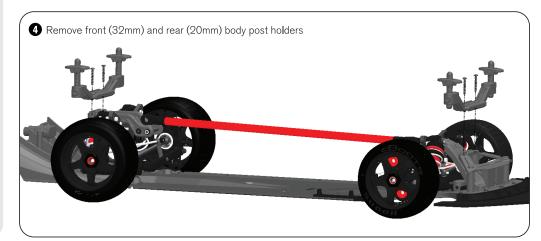

5 Swap 20mm body post holder to the front, facing upwards



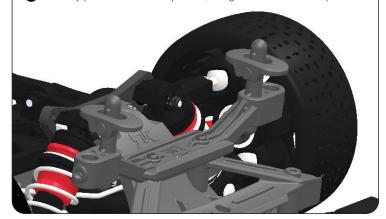

7 Swap 32mm body post holder to the rear, facing upwards

Set body posts in outside hole position, using lowest hole position



IMPORTANT NOTE FOR INFRACTION™ OWNERS

This body was designed with wider rear fenders as a direct fit for the to clear the 53/107 tires. It will work with Infraction™ real tires, but to get the optimal look/fit, you can optionally choose to either widen the rear of your Infraction™ chassis with stock rear tires, or use Felony™ rear tires with modifications to the rear gear ratio. See parts required lists at right to make these modifications

STOCK REAR TIRES - PARTS LIST

FELONY™ REAR TIRES - PARTS LIST (V1 INFRACTION™)