

BODY CAPTURE ROCK SLIDER

ASSEMBLY INSTRUCTIONS



① M2 x 6 Flat Head Hex Screw




② M3 Nylon Inset Lock Nut



③ M3 x 8 Button Head Hex Screw



④ M2.5x4 Flat Head Hex Screw

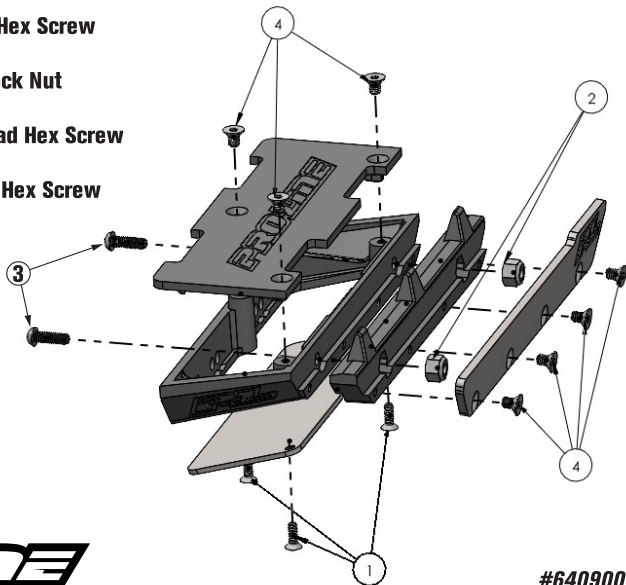

PROLINE

#640900